



FOR SERIES I ATTACHMENTS

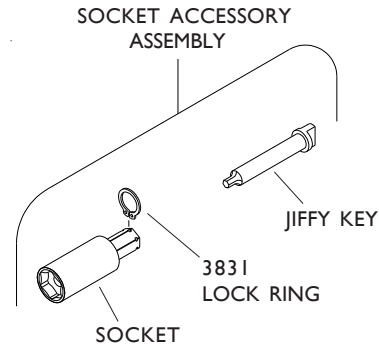

STALL TYPE INSTALLATION

1/16" / 1.59 mm JIFFY KEY

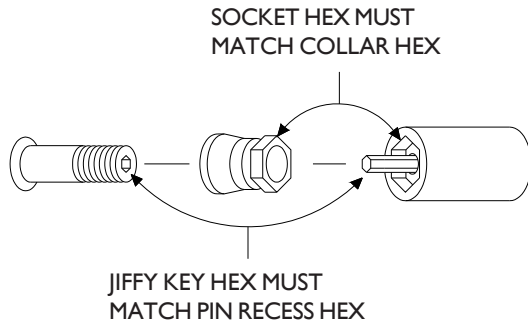

FOR 12 POINT CONFIGURATION ADD X AFTER SOCKET OR SOCKET ACCESSORY ASSEMBLY NUMBER.

LENGTH OF SOCKET

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	3/4"	1"	1 1/2"
1/16" 1.59 mm	7/32" 5.56 mm	SOCKET ACCESSORY ASSEMBLY	18522	18523	18524	18525	18526
		SOCKET	12517	12518	12519	12520	12521
		JIFFY KEY STALL	18597	18598	18599	18600	18601
	1/4" 6.35 mm	SOCKET ACCESSORY ASSEMBLY	18527	18528	18529	18530	18531
		SOCKET	12522	12523	12524	12525	12526
		JIFFY KEY STALL	18597	18598	18599	18600	18601
	9/32" 7.14 mm	SOCKET ACCESSORY ASSEMBLY	18532	18533	18534	18535	18536
		SOCKET	12527	12528	12529	12530	12531
		JIFFY KEY STALL	18597	18598	18599	18600	18601
	5/16" 7.93 mm	SOCKET ACCESSORY ASSEMBLY	18537	18538	18539	18540	18541
		SOCKET	12532	12533	12534	12535	12536
		JIFFY KEY STALL	18597	18598	18599	18600	18601
	11/32" 8.73 mm	SOCKET ACCESSORY ASSEMBLY	18542	18543	18544	18545	18546
		SOCKET	12537	12538	12539	12540	12541
		JIFFY KEY STALL	18597	18598	18599	18600	18601