



# FITS SERIES 4 ATTACHMENTS

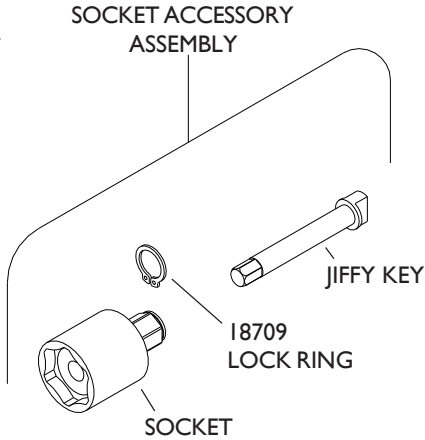

## STALL TYPE INSTALLATION 3/16" / 4.76 mm JIFFY KEY

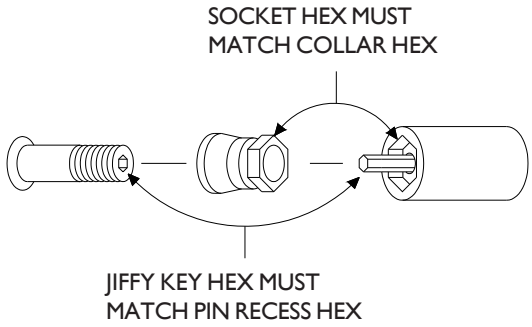

FOR 12 POINT CONFIGURATION ADD X AFTER SOCKET OR SOCKET ACCESSORY ASSEMBLY NUMBER.

### LENGTH OF SOCKET

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/2"	1"	1 1/2"	2"	2 1/2"	3"
<b>3/16"</b> 4.76 mm	<b>1/2"</b> 12.7 mm	SOCKET ACCESSORY ASSEMBLY	19201	19202	19203	19204	19205	19206
		SOCKET	19055	19056	19057	19058	19059	19060
		JIFFY KEY STALL	19013	19014	19015	19016	19017	19018
	<b>9/16"</b> 14.29 mm	SOCKET ACCESSORY ASSEMBLY	19207	19208	19209	19210	19211	19212
		SOCKET	19061	19062	19063	19064	19065	19066
		JIFFY KEY STALL	19013	19014	19015	19016	19017	19018
	<b>5/8"</b> 15.87 mm	SOCKET ACCESSORY ASSEMBLY	19213	19214	19215	19216	19217	19218
		SOCKET	19067	19068	19069	19070	19071	19072
		JIFFY KEY STALL	19013	19014	19015	19016	19017	19018
	<b>1 1/16"</b> 17.46 mm	SOCKET ACCESSORY ASSEMBLY	19219	19220	19221	19222	19223	19224
		SOCKET	19073	19074	19075	19076	19077	19078
		JIFFY KEY STALL	19013	19014	19015	19016	19017	19018
	<b>3/4"</b> 19.05 mm	SOCKET ACCESSORY ASSEMBLY	19225	19226	19227	19228	19229	19230
		SOCKET	19079	19080	19081	19082	19083	19084
		JIFFY KEY STALL	19013	19014	19015	19016	19017	19018
	<b>13/16"</b> 20.64 mm	SOCKET ACCESSORY ASSEMBLY	19231	19232	19233	19234	19235	19236
		SOCKET	19085	19086	19087	19088	19089	19090
		JIFFY KEY STALL	19013	19014	19015	19016	19017	19018